







APPLICATION FILTER GUIDE



KOMATSU PW 160-8 Komatsu SAA 4B107E-1 H60051->

Image	Description	Ref
	Air filter	RA2106
	Cab Air Filter Prefilter	SKL461912
	Cab Air Filter inner	RC6913
	Cab Air Filter Qty Rqd x2 outer only prefilter	SKL461902
	Cab Air Filter Qty Rqd x2 outer	RA4099
	Air dryer Filter	BA5374
	Ventilation filter	SBL88042SET
	Cab Air Filter inner	PA4372
	Cab Air Filter outer	RA4079
	Ventilation filter	SBL10869

		
	Air filter Safety	RA2099
	Oil Filter	SO6072
	Fuel Filter	RF1017
	Hydraulic filter	SH74443
	Fuel Water Separator Filter	RF1203