













APPLICATION FILTER GUIDE



HITACHI ZX 170 W-3 Isuzu AL-4HK1X

Image	Description	Ref
	Cab Air Filter outer	RC6028
	Cab Air Filter Internal	RC6029
	Air filter Safety	SL81497
	Air filter	SL81496
	Oil Filter	RL3044
	Fuel Filter Secondary	RF1093
	Trans Hydraulic filter	BT9440
	Pilot filter	HY90308
	Hydraulic filter suction	HY90298
	Hydraulic filter Return	HY903872

	Fuel Water Separator Filter Optional	P552010
	Fuel Water Separator Filter Primary	RF1092